


C29006 00 Diverter (1 mixed water inlet, 3 mixed water outlets)

- Flush pipes thoroughly before installation
- Remove handle (09155) and cover plate (03102) and install into wall
- Connect the outlets to their respective connections. If only 2 of the 3 outlets are used, plug the unused outlet
- During rough-in, observe permissible installation depth variance to outer finished tiled wall
- Protect the surface of the diverter until wall has been tiled
- Install the cover plate (03102) and handle (09155)
- With the adhesive stickers supplied, label on the wall plate the appropriate symbols to designate diversion of each outlet

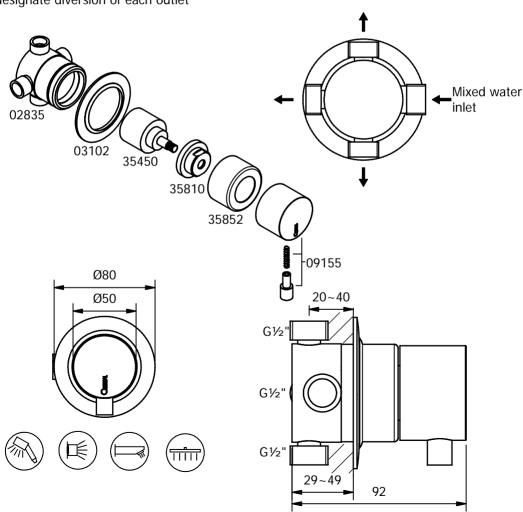



C29006 00 Diverter (1 mixed water inlet, 3 mixed water outlets)

- Flush pipes thoroughly before installation
- Remove handle (09155) and cover plate (03102) and install into wall
- Connect the outlets to their respective connections. If only 2 of the 3 outlets are used, plug the unused outlet
- During rough-in, observe permissible installation depth variance to outer finished tiled wall
- Protect the surface of the diverter until wall has been tiled
- Install the cover plate (03102) and handle (09155)
- With the adhesive stickers supplied, label on the wall plate the appropriate symbols to designate diversion of each outlet

