


## C20500, C20501

### Bath/shower mixer

## C20502

### Bath mixer

- Flush mains thoroughly before installing side valves (02868)
- Fit the spout mounting (with diverter 01790 for C20500/C20501 and 01800 for C20502)
- Assemble spout mounting assembly with mounting ring (03190) and secure the whole assembly to the deck
- Install side valves (02868). Screw in the handle body (04200) with mounting ring (03190) to the side valves (02868)
- Secure the handle connectors (35708) to the headparts and then attach the handles. Handle stick position to point at 9 o'clock (09210-H) and 3 o'clock (09220-C) in closed position
- Carefully slide spout (13380) into spout mounting (01790/01800), making sure it is seated correctly
- Tighten the screw at the rear of spout to a point where the spout will swivel freely

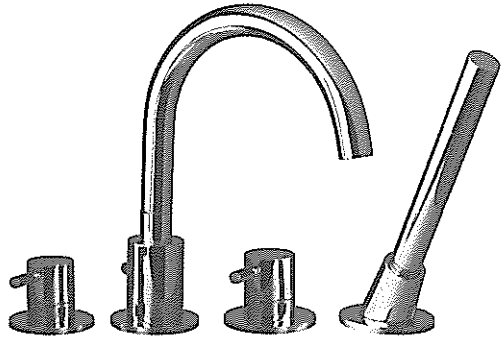

### For C20500/C20501

- Install deck mounted handshower holder (01290) and connect the metal hose (10330) to the handshower C28100/C28102 and diverter outlet (01790)
- (Optional) Determine required position for the weight (14218) and fit to the metal hose so that the hose will slide back into the handshower holder.

### For C20500/C20501/C20502

- Connect the hot & cold flexible tubes (10178) from the side valves (02868) to the inlets of the spout mounting (01790/01800)

