



CATALANO

Orinatoio BIGBOY / BOY
Urinal BIGBOY / BOY
Urinal BIGBOY / BOY


Cod. BIGBOY - BOY

Note di montaggio
Installation instruction
Montagehinweis

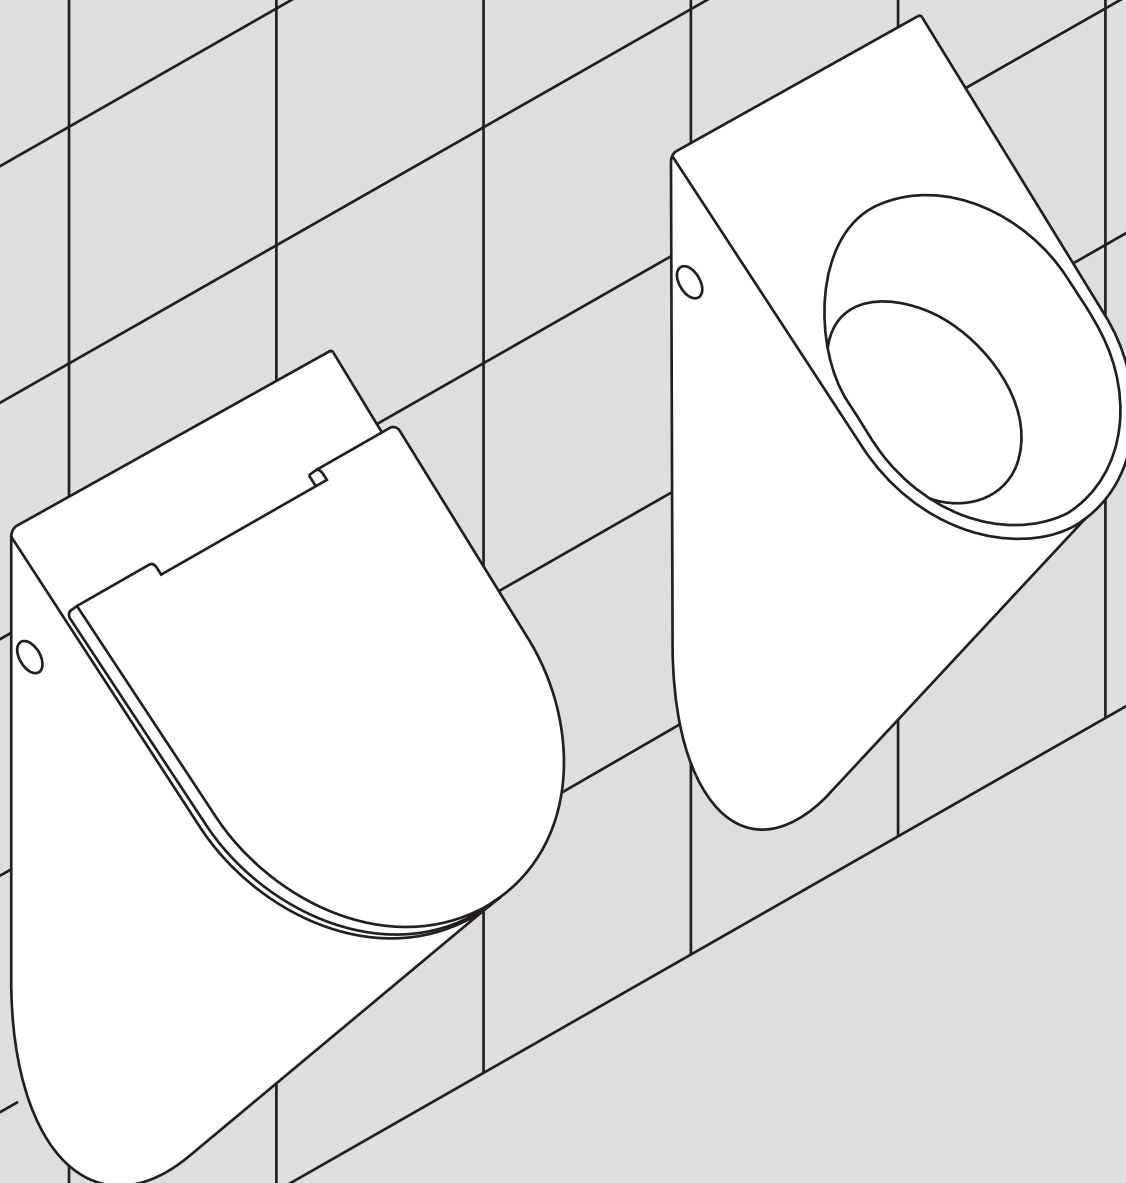


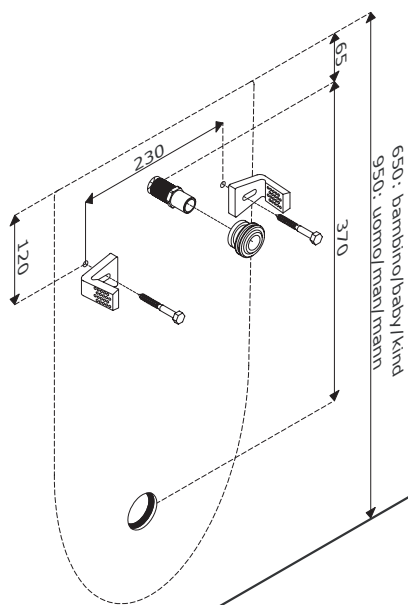


A - Predisporre i raccordi idraulici e le staffe di fissaggio
 Arrange the pipes and the fixing brackets
 Wasseranschlüsse und Fixierhalterungen vorbereiten

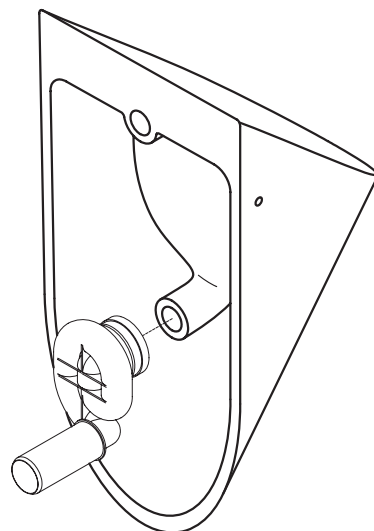


B - Montare il sifone
 Install the siphon
 Sifon montieren

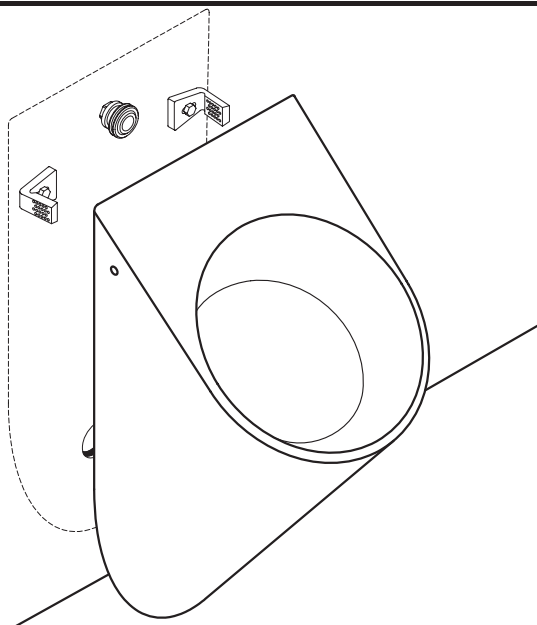


C - Posizionare l'orinatoio a parete
 Place the urinal back to wall
 Urinal an der Wand positionieren

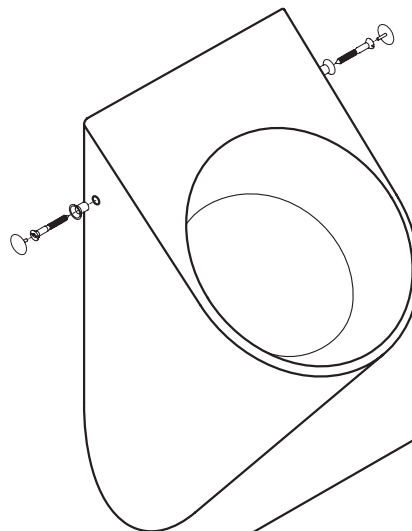

D - Serrare i fissaggi laterali
 Screw the lateral fixings
 Seitliche Fixierschrauben festziehen

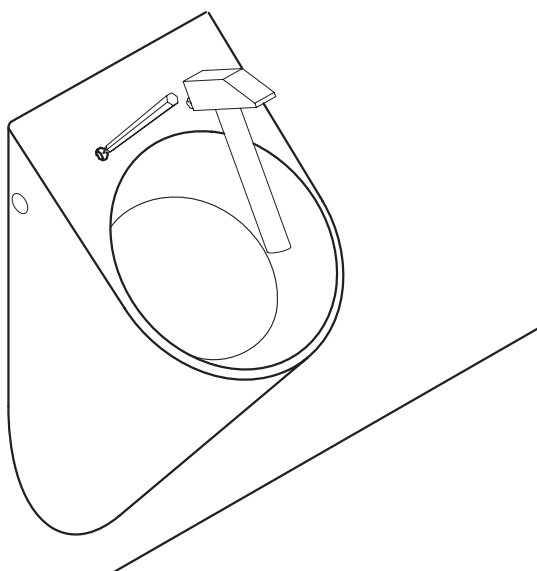

E - Per montare il coperchio (ove previsto) aprire i fori predisposti
 To install the cover (where provided) open the pre-punched holes
 Um den urinaldeckel anzubringen, vorgestanzte Löcher öffnen

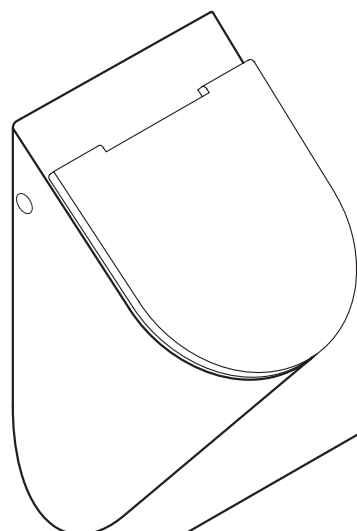

F - Montare il coperchio
 Install the cover
 Urinaldeckel anbringen